

Daily use

Shredder · Standard operating procedure



1 Sort the waste.

Take out plastic, glass, metal and anything that is not food.



2 Break up big or hard pieces.

Whole coconuts, big bones and thick stems can jam the blades.



3 Stand at the side of the hopper.

Never in front of it.




4 Feed 5 kg at a time, slowly.


Never tip in the whole tray. Too much at once clogs the shredder.



Never put your hands into the hopper while the blades turn.

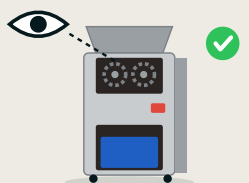

5 Wait until the hopper is clear. Then add the next 5 kg.

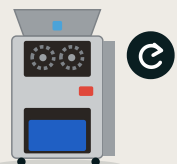

6 Jammed? Press reverse.

Then run it forward again. Still stuck? See Quick fixes.



Scan for the latest guide

imachinebuilders.com/support/organic-waste-shredder/daily-use

WhatsApp · Call

+91 80982 84795


1 / 2



- 7** **Crate nearly full? Switch off, then change it.**
Don't let it overflow.



- 8** **Switch off when you finish.**
Wait until the blades stop completely.

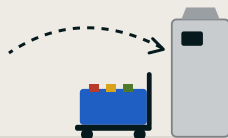

- 9** **Take the shredded waste to the composter or the pit.**



- 10** **Clean the blades now, while they are still wet.**
See Cleaning & care.

What to feed

✓ Yes

All food waste

Fruit, vegetables, meat, poultry, fish, shells, bones, pasta, bakery items, cheese and eggshells.

Food-soiled paper

Napkins, paper towels, tea bags and coffee grounds.

Plants

Flowers, leaves, grass and small trimmings.

Certified compostable items

Compostable bags (ASTM D6400), wooden stirrers and chopsticks.

✗ No

- ✗ Liquids, grease and cooking oil
- ✗ Plastic, styrofoam, takeaway containers and disposable cups
- ✗ Glass and metal
- ✗ Wax paper and waxed cardboard
- ✗ Rubber bands, twist ties and stickers
- ✗ Diapers
- ✗ 'Biodegradable' items that aren't certified compostable



Never open the control panel or touch the wiring. If you feel an electric shock, switch off the main MCB and call us at once.



Scan for the latest guide

imachinebuilders.com/support/organic-waste-shredder/daily-use

WhatsApp · Call

+91 80982 84795

2 / 2